

User Manual

1. PRECAUTIONS

We strongly recommend reading the points below before operating this product:


- ▶ Back up the data periodically to another safe media. Under no circumstances there is any liability regarding to data damage or loss.
- ▶ Do not place the reader near devices that emit strong magnetic fields. It may cause data damage or loss.
- ▶ Do not disassemble or remodel the device.
- ▶ Do not let the device drop or shock.
- ▶ Do not use the device under heavy moisture or wet.
- ▶ Do not press the device screen.
- ▶ Do not use the device in a dirty or dusty environment.
- ▶ Do not use chemicals to clean the device screen. Clean the screen with a soft cloth; be careful not to wipe it with anything abrasive.
- ▶ Do not remove microSD card or turn off the device during data writing or reading to prevent damage to data and to the device.
- ▶ Make sure the microSD card is unlocked before writing or deleting data in the microSD card.

2. INTRODUCTION

- ▶ Thank you for purchasing Energy Book I160/2160. You are reading the welcome section of the Energy Book's User's Manual. This section provides an overview of the device and its basic features.

3. GENERAL VIEW

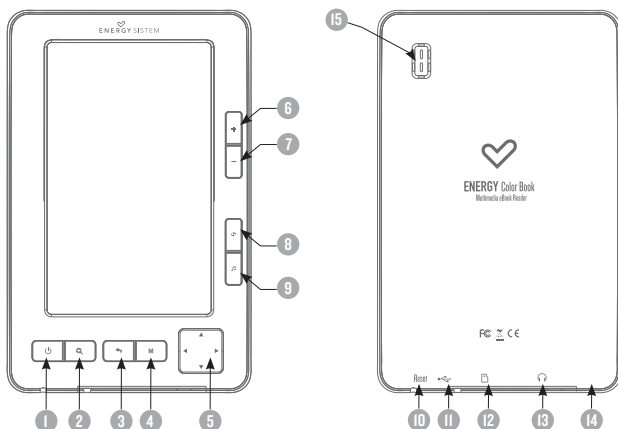

1. **Power on/off:** Power on and off the device, or change it to sleep mode with a short pressing.
2. **Zoom Button:** Zoom in and out eBooks font sizes and photos.
3. **Return/Cancel button:** Cancel a selection or return to a previous menu.
4. **M button:** Confirm a selection or open a file. Access submenu or options menu in reading mode. Pause/Play in video mode.
5. **Directional Pad:** Turn pages and browse menu options. Up key for previous page and Down for next page.
6. **Vol+:** Increase volume.
7. **Vol-:** Decrease volume.
8. Rotation button: Switch screen orientation when you are reading horizontal/vertical.
9. **Music button:** Access the music player interface.
10. **Reset button:** To reset the device back to factory settings.
11. **USB port:** Connect to computer for data transfer / charging via USB.
12. **MicroSD slot:** Supports microSD cards.
13. **Earphone jack:** Connect to earphones.
14. **DC Port:** To charge the device with the USB-DC cable included or through a USB charger (optional). We strongly recommend to use the DC port (14) to charge the device that provides a shorter charging time than the standard USB port (11).
15. Built-in Speaker.



4. GETTING STARTED

1. Fully charge the E-book's battery prior to the first use, as there might be insufficient power in the battery for normal operations.
2. Please handle the device with care to prevent damage to the display screen.
3. Read the User Manual.

5. POWER ON / POWER OFF

- ▶ When the device is powered off, press and hold the  On/Off button for 3 seconds to turn it on.
- ▶ When the device is powered on, press and hold the  On/Off button for 3 seconds to turn it off.

6. FILE MANAGEMENT

6.1 CONNECT TO THE PC

- ▶ You should press Power button to turn on the player, then connect the player to the PC with the USB cable (included). A dialogue box will appear, select "OK" and press [M] button to confirm and wait until your computer recognizes the reader as a mass storage device ready for data transfer.

6.1.2 MANAGING FILES

- ▶ From the browser of your computer you can copy, delete and organize files or folders. When you connect the device to the computer, it is not possible to use the device at the same time.

The files on the memory card are organized in various folders that come from factory default options. You can create, delete and organize internal folders.

The device will compile all the information stored on the microSD card. The process can take several minutes depending on the number of available files on the memory card and the capacity.

6.1.3 USING MICROSD CARDS:

- ▶ The eBook supports standard microSD cards for storing thousands of books, music and pictures. MicroSD card must be in FAT/FAT32 format.
 - To begin, slide in the card into the slot.
 - The contacts of the card face up, label face down.
 - Push the card gently until it clicks into place.
 - To eject the card, just push it in slightly.

Initial Charge and Subsequent Charges

We recommend that your first three charges take up to 12 hours each; this will extend the battery life as well as provide a longer usage time. Subsequent charges will only need about 4 to 6 hours (USB-DC connection).

Recharging the Battery

The player is powered by a special Li-ion polymer rechargeable battery. When the battery becomes low,
Connect the reader via DC port to your computer free USB port.

Note: Only use a specific external USB charger with same power specifications. Use of an inappropriate external power supply may cause failure of the device and will void the warranty.

7. PRINCIPAL MENU

- To display the Main Menu, turn the device on by pressing and holding the power button for 3 seconds. The Main Menu consists of the following sections:

Energy Color Book

Recent files list	
Favorite	
Ebook	
Picture	
Music	
Video	
Explore	
Settings	
User's manual	

03:10^{AM}
Nov,03,2023



7.1 RECENT FILES LIST

- Items read by the user recently will be shown. Use the arrow keys to select, and press “M” key to open the desired file.

If files are saved in the microSD card, they will still be displayed in “Recent Files List” even if the microSD card is removed. They cannot be opened if the microSD card is not inserted.

7.2 FAVORITE

- Include the list of all the books that have recently been marked as favorites.

To mark a book as a favorite you have to open the eBook, press [M] for options and select FAVORITE to confirm.

Note: The books marked as favorites always kept the open mark from the page location that was selected as a favorite.




7.3 EBOOK

- This option allows you to access your eBook library stored in reader's internal memory or microSD card.
- Press UP/DOWN buttons to select the file, then press the [M] key or Right button to enter in the file list, press UP/DOWN buttons to select the eBook you want to read and press M button to open.




The player supports: TXT, HTML, PDF, EPUB, FB2, RTF, MOBI, CHM, DOC.

Note: Some files larger than 500KB may cause device malfunction due to memory consumption. In these cases we recommend to convert the file to another suitable format.

Energy Color Book

Recent files list		Back to Parent
Favorite		Sdcard
Ebook		User
Picture		
Music		
Video		
Explore		
Settings		
User's manual		

Energy Color Book

Recent files list		Back to Parent
Favorite		
Ebook		Photo-10.jpg 87KB 2010/05/21
Picture		Photo-6.jpg 58KB 2010/05/21
Music		
Video		
Explore		
Settings		
User's manual		

03:10^{AM}

Nov,03,2023



05:39^{AM}

May,20,2008



FUNCTIONS AVAILABLE WHEN READING AN EBOOK:

- Press UP/DOWN buttons to turn page (previous/next).
- Press Zoom button, select the desired zoom level and press M button to zoom in or out.
- Press Rotation button to switch screen orientation horizontal/vertical when you are reading.
- Press M button to access option menu listed as below, then press UP/DOWN buttons to select the option, press M button to confirm your selection.

7.3.1 FONT:

- Change the font you want to use for reading. (Courier, DejaVu Sans, DejaVu Serif, Helvetica, Microsoft YaHei). Followed by pressing the letter [M] to confirm your selection and choose the font size.

1 Youth Youth is not a time of life; it is a state of mind; it is not a matter of rosy cheeks, red lips and supple knees; it is a matter of the will, a quality of the imagination, a vigor of the emotions; it is the freshness of the deep springs of life. Youth means a temperamental predominance of courage over timidity, of the appetite for adventure over the love of ease. This often exists in a man of 60 more than a boy of 20. Nobody grows old merely by a number of years. We grow old by deserting our ideals. Years may wrinkle the skin, but to give up enthusiasm wrinkles the soul. Worry, fear, self-distrust bows the heart and turns the spirit back to dust. Whether 60 or 16, there is in every human being's heart the lure of wonders, the unfailing appetite for what's next and the joy of the game of living. In the center of your heart and my heart, there is a wireless station; so long as it receives messages of beauty, hope, cheer, courage and power from man and from the infinite, so long as you are young. When your aeriels are down, and your spirit is covered with snows of cynicism and the ice of pessimism, then you've grown old, even at 20; but as long as your aeriels are up, to catch waves of optimism, there's hope you may die young at 80. 2 Three Days to See I read thrilling stories in a limited and specified time as long as a year, sometimes. But always we were in just how the doomed hero days or his last hours. I men who have a choice, not how sphere of activities is set us thinking, wonder do under similar circumstances, what associated to those last hours as pretz? Sometimes I have excellent rule to live each tomorrow. Such an attitude

Font
GotoPage
Bookmark
Favorite
Style
15:00 2008/Jun/08
Exit

ascii 2/6

1 Youth Youth is not a time of life; it is a state of mind; it is not a matter of rosy cheeks, red lips and supple knees; it is a matter of the will, a quality of the imagination, a vigor of the emotions; it is the freshness of the deep springs of life. Youth means a temperamental predominance of courage over timidity, of the appetite for adventure over the love of ease. This often exists in a man of 60 more than a boy of 20. Nobody grows old merely by a number of years. We grow old by deserting our ideals. Years may wrinkle the skin, but to give up enthusiasm wrinkles the soul. Worry, fear, self-distrust bows the heart and turns the spirit back to dust. Whether 60 or 16, there is in every human being's heart the lure of wonders, the unfailing appetite for what's next and the joy of the game of living. In the center of your heart and my heart, there is a wireless station; so long as it receives messages of beauty, hope, cheer, courage and power from man and from the infinite, so long as you are young. When your aeriels are down, and your spirit is covered with snows of cynicism and the ice of pessimism, then you've grown old, even at 20; but as long as your aeriels are up, to catch waves of optimism, there's hope you may die young at 80. 2 Three Days to See I read thrilling stories in a limited and specified time as long as a year, sometimes. But always we were in just how the doomed hero days or his last hours. I men who have a choice, not how sphere of activities is set us thinking, wonder do under similar circumstances, what associated to those last hours as pretz? Sometimes I have excellent rule to live each tomorrow. Such an attitude

Font Option
Page:1/1
Courier
DejaVu Sans
DejaVu Serif
helvetica
Microsoft YaHei
Font Sample
15:00
Exit

ascii 2/6

1 Youth Youth is not a time of life; it is a state of mind; it is not a matter of rosy cheeks, red lips and supple knees; it is a matter of the will, a quality of the imagination, a vigor of the emotions; it is the freshness of the deep springs of life. Youth means a temperamental predominance of courage over timidity, of the appetite for adventure over the love of ease. This often exists in a man of 60 more than a boy of 20. Nobody grows old merely by a number of years. We grow old by deserting our ideals. Years may wrinkle the skin, but to give up enthusiasm wrinkles the soul. Worry, fear, self-distrust bows the heart and turns the spirit back to dust. Whether 60 or 16, there is in every human being's heart the lure of wonders, the unfailing appetite for what's next and the joy of the game of living. In the center of your heart and my heart, there is a wireless station; so long as it receives messages of beauty, hope, cheer, courage and power from man and from the infinite, so long as you are young. When your aeriels are down, and your spirit is covered with snows of cynicism and the ice of pessimism, then you've grown old, even at 20; but as long as your aeriels are up, to catch waves of optimism, there's hope you may die young at 80. 2 Three Days to See I read thrilling stories in a limited and specified time as long as a year, sometimes. But always we were in just how the doomed hero days or his last hours. I men who have a choice, not how sphere of activities is set us thinking, wonder do under similar circumstances, what associated to those last hours as pretz? Sometimes I have excellent rule to live each tomorrow. Such an attitude

Font Option
Page:1/1
Courier
DejaVu Sans
DejaVu Serif
helvetica
Microsoft YaHei
Font Sample
15:00
Exit

ascii 2/6

7.3.2 GO TO PAGE:

- Jump to a desired page. There are three options: First page, Last page, Go to page. After you confirm "Go to page" option, you can set the specific page number you want to go to. Press Directional pad to move cursor to select the number, then press M button to confirm.

7.3.3 BOOKMARK:

- ▶ For readability, you can set markers. Bookmarks are sorted and accessible for easy eBook access.

Add a Bookmark:

- ▶ Select “Add bookmark” on the menu to add a bookmark on the current reading page.

Open a Bookmark:

- ▶ Select “Go to bookmark” from the menu. Press [Up/Down] to select the desired bookmark and press M to read the bookmark

Delete a Bookmark:


- ▶ Select “Delete bookmark” from the menu, select the bookmark that you want to delete and press M to confirm.

7.3.4 Favorite:

- ▶ Store the eBook as Favorite, accessible through the main menu.

7.3.5 Style:

- ▶ Set the margin, space and alignment.

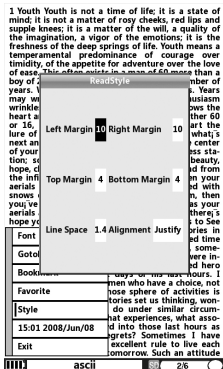

7.3.6 Time:

- ▶ Set the time (hour, minutes and zone).

Note: Press Music button to access the music player, then press Return button to return to the reading mode.

7.4 PICTURE

- ▶ Select Picture on Main Menu and press UP/DOWN buttons to select the desired image and press M button to open.
 - Press Rotation button to switch screen orientation horizontal/vertical.
 - Press Zoom button, then select the desired zoom level and finally press M button to zoom in or out.
 - Press UP/DOWN buttons to select previous/next photo.
Press M button to access options menu listed as below:

A. Zoom: Normal, Fit to Height, Fit to Width, Zoom +.

B. Rotate: Normal, Rotate 90°, Rotate 180°, Rotate 270°.

C. Exit: exit to previous menu.


Press Music button to access the music player, then press Return button to go back to photo mode.

Press Return button to return to the previous menu in any interface.

The player supports: JPEG, BMP, PNG, GIF formats.

7.5 MUSIC

- This option starts the music application, to play audio files stored on the device.
1. Select the file that you want to listen and press [M] to confirm.
 2. The list will show all the songs stored in the selected folder (internal memory or microSD card).
 3. You can enjoy music files while you read a book or see pictures. To do this, click the [music] button to start the audio interface, and then select the song and press [back] to return to the main menu. You can access books or pictures and the music will continue playing. To change the song or stop playback, select again the music player

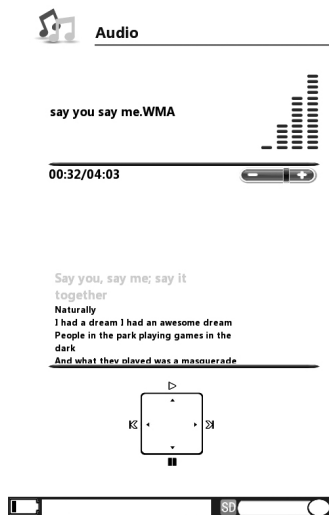

Note: In order that the music files displays the track info, their artist, album and genre information must be stored into the file (information known as ID3-Tag).


You can find freeware utilities to create or modify ID3-Tags.

The player supports: MP3, WMA formats.

7.6 VIDEO


- ▶ Press UP/DOWN keys to select the option you want and press M button to open.
- ▶ During video playback, press M button to play/pause.
- ▶ Press and hold then loose LEFT/RIGHT button to keep fast rewind /fast forward.
- ▶ Press Return button to return to the previous menu.
- ▶ The player supports: MP4, WMV, AVI, RMVB, FLV, ASF, 3GP, MOV formats.

Note: You can play AVI (Divx/Xvid) / FLV / RM / RMVB videos directly without conversion. On some exceptional occasions (like uncommon codecs or bitrates), to ensure a correct visualization and compatibility, you can play videos previously converted to AVI format (XVID with MP2 audio) with any conversion software available.

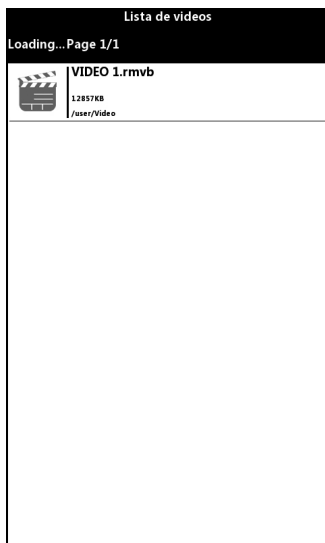


7.7 EXPLORE


- Select “Explore” from the main menu and press [M] button to enter. All the files and folders stored in the device (flash memory) and microSD card will be listed. Select the desired option to browse folders or files and press [M] to open/confirm your selection.

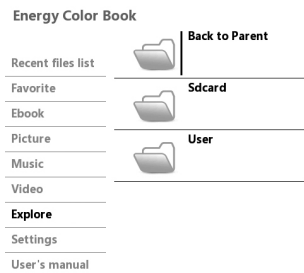

03:10^{AM}
Nov,03,2023

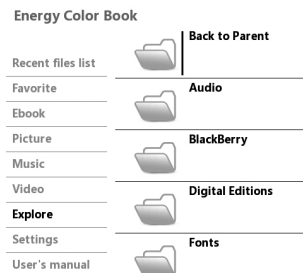

03:17^{AM}
Nov,03,2023

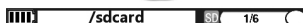

7.8 SETTINGS

7.8.1 DEFAULT

- This function restores factory default values.

7.8.2 UPGRADE

- Select this option and press [M] button to confirm, a dialogue box will popup, press the directional pad to confirm the upgrade.

7.8.3 FORMAT

- ▶ Select this function only if necessary to format all data on the internal memory/ microSD card. We strongly recommend that you perform regular a backup copy of your files stored in the reader.


Note: This option will erase all data on internal memory and microSD card.

7.8.4 SYSTEM INFO

- ▶ Display system version information.

7.8.5 BRIGHT

- ▶ Press directional pad to adjust the brightness level. A higher brightness level will consume more battery.

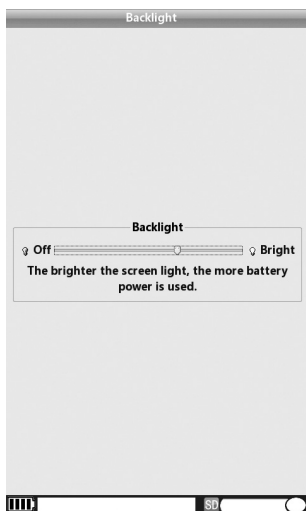

7.8.6 SORT

- ▶ You can sort books by name, date, size and type.

7.8.7 LANGUAGE

- ▶ Change the user interface language.

eReader-work



7.8.8 TIME

- Adjust the system date and time. Press the joystick to move the cursor, and adjust the value. Select the zone location with the joystick on the TZ cell. Locate your geographic region and press [M] to confirm the setting.



7.8.9 POWER MANAGER

- To adjust the power settings. You can adjust the backlight auto off time and the system sleep on minutes and seconds. Press the joystick to move the cursor, and adjust the value pressing M to confirm.



7.8.10 DESKTOP

- Set the pre-installed desktop backgrounds on the main menu and submenus.

8.0 USER'S MANUAL

- We have included an electronic copy of our manual for your review. Simply choose the option from the main menu, and press the M button to read it.

9. ABOUT MICROSD CARD

- If microSD card cannot be recognized by the device, you should again remove the microSD card and reboot the device. When the system is reading data, please do not remove the memory card or reset the system. If you need to reformat the microSD card please create a backup copy of your files previously and format the microSD card in FAT/FAT32 file system.

10 RESET YOUR EBOOK

- ▶ In the rare event that the data on the screen is corrupted or device freezes, you will need to perform a reset.

The Reset button is located on the back of the device. It can be accessed with any thin object like a paper clip. Never use a needle or a sharp pin for this purpose since it can damage the device.

ATTENTION: This operation will restore the device to original factory values, erasing all user settings.

11. RECOMMENDATIONS

1. Due to the limited RAM, some text as PDF and video as AVI files cannot be played properly due to resolution/bitrate or codec used.
2. We recommend that you keep a backup of the contents of microSD card additional external storage medium (PENDRIVES, hard drives, etc.).
3. The eBook is compatible with microSD/SDHC cards but when more used memory are your needs more load time will need, creating a instability on the device.
4. Do not put weight on the device.

12. TROUBLESHOOTING

The device hang or cannot be switched on.

- ▶ Reset the device by pressing the Reset button with a small pin or clip.
- ▶ Battery has been fully depleted. Please charge the device via USB.

Battery capacity seems short:

- ▶ The battery is not used for prolonged period. Please recharge the battery device again.
- ▶ The battery is not fully charged. Please charge the device for 4-6 hours depending of power supply (USB,USB-DC).

It takes long time for the display to appear:

- ▶ This is due to the characteristic of the display panel, especially in low temperature environment, and not a malfunction.

Cannot read/open en ebook:

- ▶ Check if the book has copyright protection. Check if the book format is supported by device.

- ▶ Format Reading: TXT (unlimited size), PDF (up to 4MB), EPUB (up to 4MB), PDB(up to 4MB), DOC(up to 5MB).

The device cannot be operated during USB connection:

- ▶ The device cannot be operated while it is connected to a computer
- ▶ Remove the device from computer to resume operation.
- ▶ To use your device while charging, click on the [Safely Remove Hardware] icon located on the right corner to disconnect with computer. After is safely removed, computer will only charge your device and you can now resume normal operation.
- ▶ Your device can read microSD cards up to 32 GB.

On microSD card:

- ▶ After inserted a microSD card, if your device is has no response, please take out and insert again.
- ▶ Do not remove microSD card or turn off during data writing or reading to prevent damage to data and your device.
- ▶ Make sure the microSD card is unlocked before writing or deleting data in the microSD card.
- ▶ Backup your files and data before formatting the microSD card. Please format the microSD card in FAT/FAT32.

Why do some EPUB documents not look right on my Energy Book?

- ▶ Many publishers and convert software are supporting this format, but without maintaining a single standar set. One of the most common problems is when the creator puts everything EPUB e-book content in a "chapter" in EPUB. This can cause the document reading differs with formatted text, margins, gaps, etc.

Is Matter the size of supported file by my Energy Book?

- ▶ Yes, less than 10 MB TXT files. EPUB 4 MB. PDF 4 MB. PDB 4 MB. When more images and graphics are in the ebook the response of your device will be slow

Can I listen music while reading?

- ▶ Yes, expect in PDF format.

Why some video files cannot be played?

- ▶ Maybe your format/codec may not be 100% compatible, (see supported files table). Please convert the file with a specialized program to ensure compliance and obtain a file which occupies less space in reader memory.

II.1 SPECIFICATIONS

VIDEO FORMAT	VIDEO/AUDIO CODEC	RESOLUTION MAX.
RMVB	REAL8/9/10+COOKER/RA/AAC	640 x 480
AVI	MPEG4 SIMPLE PROFILE + MP3/AC3/AAC	
	MPEG4 ASP + MP3/AC3/AAC	
	DIVX 3/4/5 + MP3/AC3/AAC	
	XVID + MP3/AC3/AAC	
WMV	WMV 7/8/9 + WMA/ MP3/AC3/AAC	
FLV	DAT MPEG1 + MP3	
	TS MPEG2 + MP3	
MOV	MPEG4 + MP3/AC3/AAC	
MP4	MPEG4/DIVX/XVID + MP3/AC3/AAC	
3GP	MPEG4/DIVX/XVID + MP3/AC3/AAC	
ASF	MPEG4/DIVX/XVID + MP3/AC3/AAC	

ITEM	DESCRIPTION
DISPLAY	TFT LCD COLOR
	5.0 inch
	800(V)×480(H)
E-BOOK	TXT, HTML, PDF, EPUB, FB2, RTF, MOBI, CHM, DOC. 5 kinds of fonts, 6 level of font size 3 options for page jump, Book Margin/Line space adjustable. Landscape and Portrait available, 4 options for alignment
FORMATS	Photo: JPEG, BMP, PNG, GIF
	Audio: WMA, MP3
	MP3: 8Kbps ~ 320 Kbps.
	WMA : 5Kbps ~ 320 Kbps.
DIGITAL FILES SUPPORT	microSD up to 32GB
MEMORY	Internal 2GB (1052 Ruby Red-Electric Blue)
	4 GB (1054 Arctic White)
	8 GB (1058 Dark Iron)
BATTERY TYPE	Built in Li Polymer (1800 mAh)
	eBook mode: 7-9h, Approx. (depending of bright setting and ebook)
	Audio mode: 7 h with earphones.
	Video mode: 4 h.
	Battery Charge USB: 6 ~ 8 h.
	Battery Charge USB/DC: 4 ~ 6 h.
SIZE	Weight: 181 g. without pouch 154mm × 98mm × 10mm

WARRANTY

- Energy Sistem Soyntec S.A. warrants its products to be free from defects in materials and workman ship at the time of purchase.

The warranty period is 36 months from the date of purchase.

WARRANTY PROCEDURE

- Visit the Support section at <http://support.energysistem.com> and select your product to view the FAQ (Frequently Asked Questions). The solution to your problem is very likely to have been already published there. You will also be able to download user manuals, user guides, drivers and updates.

If you cannot find an appropriate solution in the Support section, you may send us your enquiry or warranty service request by email: support@energysistem.com

Alternatively, you may prefer to contact the distributor from which you purchased the product, presenting the purchase receipt or invoice.

Specifications are subject to change without notice.

© 2010 by Energy Sistem®. All rights reserved.

TRADEMARKS.

All company, brand and product names are trademarks or registered trademarks of their respective companies.

DECLARATION OF CONFORMITY

Manufacturer Name: Energy Sistem Soyntec S.A.

Address: Pol. Ind. Finestrat, C/Calpe nº1, 03509, Finestrat Alicante (Spain)

Tel: 902 388 388 **Fax:** 902 119 034

NIF: A53107488

We declare under our own exclusive responsibility that the product:

Energy Sistem® Electronic Book Reader Energy™ Color Book I052/I054/I058

Manufacturing country: China

Is in compliance with the essential directives, norms and standards of the European Union 89/336/EEC (EMC Directive).